
# Tennis Ball Machine TS-08 Manual TS-06

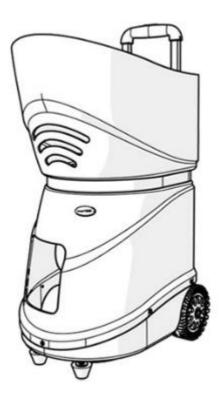

# Thank you for choosing TS-08 (TS-06) Tennis ball machine.

The Quick Start Guide includes an introduction to the TS-08 (TS-06) Technology Edition. Before operating the machine, please read this manual carefully to avoid unnecessary damage to the body and damage to the machine.

#### **CAUTION:**

This machine was designed to be used on a tennis court and in no other circumstances. Only tennis balls must be used, no other balls should be ejected from the machine. Never stand in front of the machine unless you are on the other side of the net (more than 7 meters (8 yards) away). Even when the machine is paused, never stand in front of it as balls can eject at any time. Children should be supervised at all times and taught never to stand in front of the machine.

Do not use the machine in rain and avoid using wet balls. We recommend the use of pressure less balls to give your machine the best performance. Using a combination of new and old balls will give inconsistent results.

Step 1: Install the software Download and install the mobile APP software Download link:

#### Http://www.tennismash.com.cn/ts0608.apk

Step 2: turn on the switch

Step 3: Mobile phone and machine Bluetooth match, set up and run software


From the mobile phone settings into the Bluetooth settings, scan for devices ( TenniSmash08 or TenniSmash06)



Input PIN Code: 1234

	2G utl 🔒						
<		Bluetoot	h				
Blu	etooth		$\bigcirc$				
It can be found now to be"vivo Y66" .							
Dr	Blueto	oth pairing	a request	₩66			
CI	Dideto	otri panni	grequest	se			
	Enter PIN to pair with TenniSmash08 (Try 0000 or 1234)						
	(11) 0000 0	1234					
A١		u may also need to type this PIN the other device.					
*	OK		Cancel				
	工作手机						
∦	5B:AA:00	:52:51:DA					
r	02,000						

## Paired Connection Successful

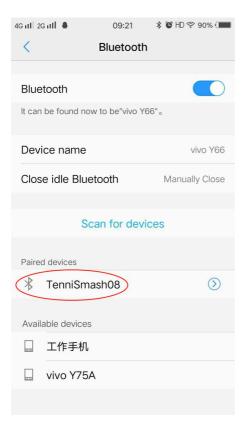

Run the App, click on Bluetooth icon, and select the machine that have been paired.




Then select the machine ( TenniSmash08 or TenniSmash06)


4G 111 2G 111	10:45	🖇 🕒 HD 🧙 75% 🗔 🗖
TenniSmash 00:0C:BF:16	08 :3B:0F	

SCAN FOR DEVICES


When the connect to TenniSmash08 (TenniSmash06) is displayed on the upper left corner, the connection is successful.

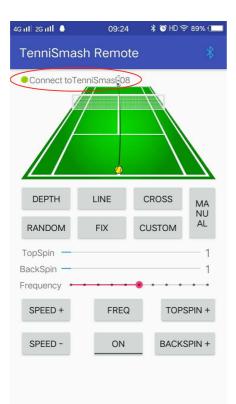


## TenniSmash06

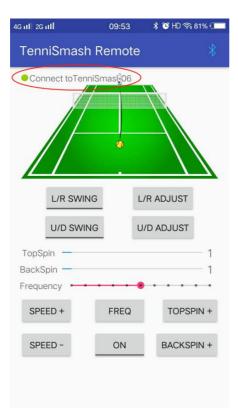

### Click "ON" to run the machine

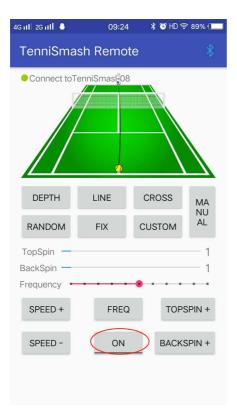

## **Product Featured**

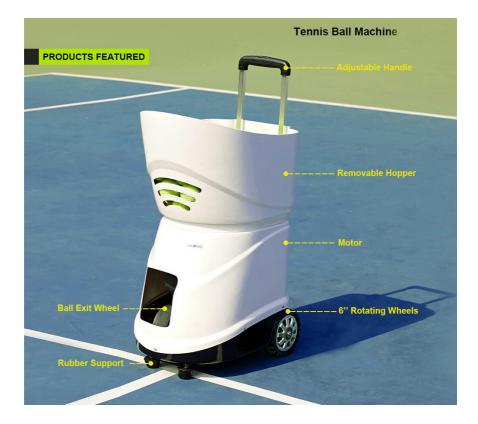

## Operation panel diagram



#### **Charging batteries:**

This product is equipped with 16AH large capacity lithium battery, the battery is fully charged after the normal working time is about 6 hours. Please charge before use. While charging, the charger indicator is displayed in red, fully charged into green. When the battery is exhausted, the charging time is about 8 hours.



### Use steps:

1. Place the ball machine to the right place on tennis court; fasten the ball-loading frame back on the serve machine.

- 2. Adjust the direction of the ball.
- 3. Adjust the ball speed and mode.
- 4. Enjoy the Tennis

### Maintenance:

You can vacuum out the inside of your machine to remove ball fluff. The outside of the machine can be wiped down with a mild detergent, however, please be careful not to get water inside the machine. The throwing wheels should be wiped down after every use to prevent any buildup of residue from the balls.

## **Troubleshooting:**

1. When the power button is pressed and the power is off, follow the steps below:

A) Check that the battery is charging.

B) Check if the fuse is blown.

2. Press the power button, the power light does not light, may be due to excessive current, battery start protection If the battery protection lock occurs, the switch indicator light does not light. Please turn off your machine, the battery charge for 5 minutes can unlock the battery.

3. Clearing Ball Jams

If you find that a ball gets stuck behind the two throwing wheels, the machine may shut down to prevent damage to the circuit board. Please turn the machine off and clear the ball jam.

4. Other fault conditions:

If you can not personally troubleshoot, or if any of the above problems occur, please call our customer service hotline for further processing.

# **Product Details:**

Model No.	TS-08
	TS-06
Rated Voltage(V)	DC12
Ball Capacity(Pcs)	160
Speed (Km/h)	20-140
Feed rate (second)	2-10
Battery Life (Hour)	4-8
Gross Weight (Kg)	19
Dimension(mm)	578×448×528

# Packing List

Tennis Ball Machine	1pcs
Remote Control	1pcs
(optional accessories)	
Charger	1pcs
User Manual	1pcs
Fuse (back-up)	2pcs