


Input and output Voltage	AC220V/50Hz					
Max current load	10A					
Standby	Display shows:00:00					
Accumulated time	Yes, add time if insert coins again					
How it works	Insert coins-> Display shows remaining time and supply					
	power to device-> it cuts off power after time runs out					
Installation (STEP-1)	Please reference to page 2					
Program coin (STEP-2)	Please reference to page 3					
Time setting (STEP-3)	Please reference to page 4					
Optional setting	Please reference to page 5					
Video reference	Please reference to page 5					

Description

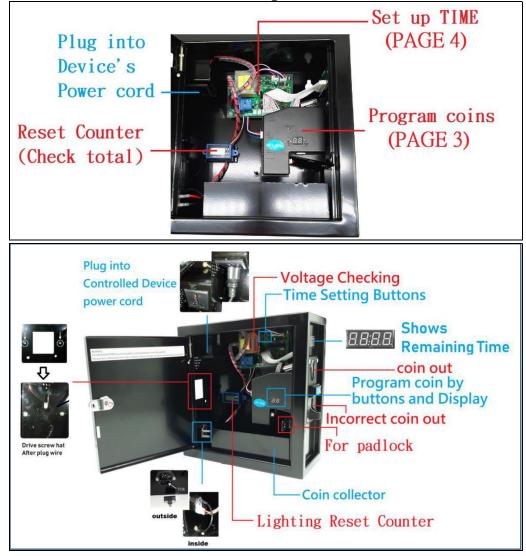

Installation

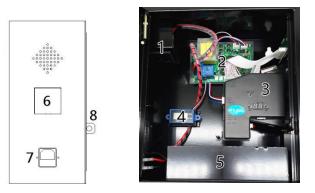

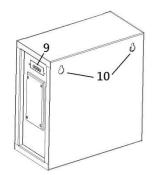

A. Plug device power cord through No.6 into No.1



B. Screw iron sheet on



C. Power on: Plug into power cord after voltage checking



- D. No.3: Please follow "PAGE 3" specification to PROGRAM COINS
- E. No.2:Please follow "PAGE 4"specification to SET UP TIME
- F. Power off. Place and fix the box from No. 10.
- G. Start using
- H. No.4: Reset Counter- check total income




Manual Reset: Push Reset button

No.5: money collector

Program coins

Step 1-Set up value

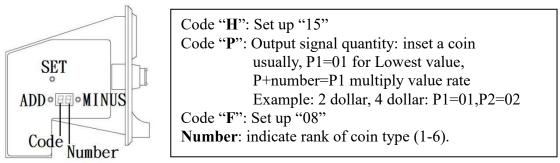

- 1. Hold on button "ADD" and "MINUS" simultaneously for seconds." A" shows up.
- 2. Hold on button "SET" for seconds."E" shows up.

Use button "ADD" and "MINUS" to set up coin type between 1 and 6.

- 3. Hold on button "SET" for seconds to switch to next code from H to F in cycle.
 - Please Use button "ADD" and MINUS to set up value.
 - Please hold on button "SET" for seconds to switch to next code
 - Please follow following table to set value for code.

Order: First type \rightarrow Second type \rightarrow Third type \rightarrow Forth type \rightarrow Fifth type \rightarrow Six type \rightarrow A \rightarrow E

First type		Second type		Third type		Forth type		Fifth type		Six type		
code	value	code	value	code	value	code	value	code	value	code	value	
H1	15	H2	15	H3	15	H4	15	H5	15	H6	15	
P1	SET	P2	SET	P3	SET	P4	SET	P5	SET	P6	SET	
F1	08	F2	08	F3	08	F4	08	F5	08	F6	08	
Α	A shows up after F-> Hold on button "SET" for seconds											
Е	E shows up after A->Power off and on when you see "E" AGAIN after A.											

Note:


- If coin type is not up to 6, "E" shows after coin type reaches your setting.
 For example: If you set up coin type as 3, "E" shows up after F3. You can power off and on after finish "F3" and see "E"
- Hold on "SET" for seconds to switch code.


Step 2-Sample Coin

- 1. Hold on "SET" for seconds, and "A1" shows up from display.
- 2. Please insert coins of **TYPE 1** into coin entry until "A1" shows up again.
- Please repeat No.1 and No.2 until all coin types are sampled.
 A1=Type 1, A2=Type 2, A3=Type 3, A4=Type 4, A5=Type 5, A6=Type 6
- 4. Please power off and on.

Tip: If you want to re-sample few types, hold on button "SET" to skip others.

Time Set up

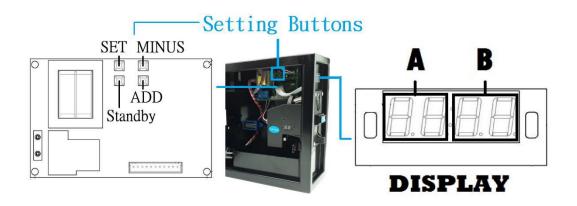



TIME SETTING

Please follow CODE ON DISPLAY to set up

Use "ADD" and "MINUS" to set up VALUE

• COIN QUANTITY OF TYPE 1 AND TIME:

1. Please push "SET". "B" flashes. Please set up COIN QTY to active device (01-50).

Default is 01

For example: 02, inset 2 pcs of coin type 1 to start device.

- 2. Please push "SET" \rightarrow "A" flashes \rightarrow Please set up TIME for A (01-99). Default: MINUTE
- 3. Please push "SET" \rightarrow "B" flashes \rightarrow Please set up TIME for **B** (01-99). Default: SECOND
- 4. Please push "SET" 4 TIMES.
- Please set up TIME for Warning Sound.
 Default is 30
- 6. Please press button "S4" to finish.

OPERATING MODE SETTING

You DON'T need to set up this if you use DEFAULT SETTING.

• **Mode Setting**

Please follow table to set up operating function:

1. Please hold on "ADD" and "MINUS" simultaneously for 3 seconds \rightarrow

1:01 Show up \rightarrow Please use "ADD" and "MINUS" \rightarrow to set up VALUE

- Code on Function Display Description A B Running Time Time runs down without pressing button 1 01 Time Type 03 **MINUTE : SECOND** 2 (Display A:B) 04 HOUR : MINUTE Yes: keep running Remaining time 05 3 after power off and on Memory No: Standby after power off and on <u>06</u> user has no action after push buttons or receive 4 1-30 Back to standby signals in setting time Default: 1-3: Bold and base line. 4: not use the function.
- Please press "SET" to switch to next code 2.